

Universal Steering Knuckle Spreader Instruction


Designed for hubs with clamping style struts (A) and ball joint mounts (B)

1. Remove hub clamp bolt.
2. Select the correct size pins to match bolt holes.
3. Set up the spreader as in fig.1
4. Slide the pins into the bolt hole.

Position tool on car and secure arms and pins with grub screws.

5. Expand hub by using a spanner or socket and wrench screw until allows movement of the ball joint or strut.

fig.1

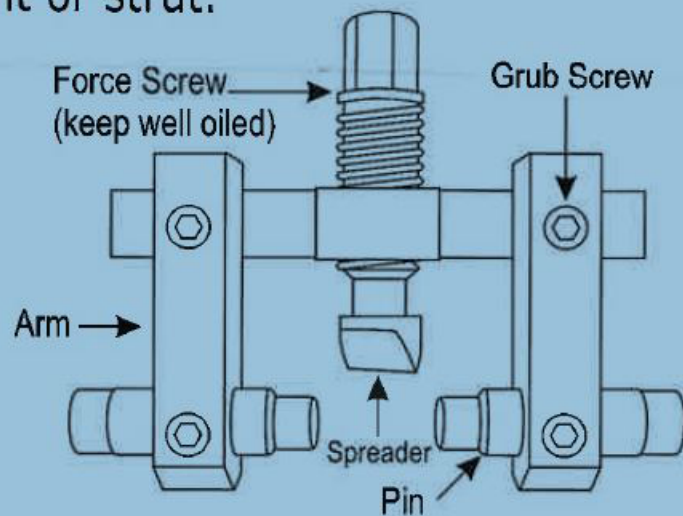

A



B

